

User Guide

Thank you for purchasing a SKOPE refrigeration product.

Safety

Always observe safety precautions when using any electrical appliance. Read these instructions carefully and keep them for future reference.

WARNING

- Ensure the appliance is disconnected from the power supply before performing any cleaning or maintenance.
- Do not cover the grilles or block the entry or exhaust of airflow by placing objects up against the refrigeration unit.
- Should manual defrosting be necessary, turn off the refrigeration system and allow the ice to melt by air circulation. Collect ice and water during defrost to prevent a slip hazard. Do not use mechanical methods to remove ice, as this may damage the refrigeration circuit.
- Do not use any electrical devices or appliances inside the food storage compartment.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use this appliance for other than its intended use.
- Do not insert fingers/foreign objects into any holes.
- Only use this appliance with the voltage specified on the cabinet rating label.
- Ensure the appliance has adequate ventilation as this is essential to economical, high performance.
- Be careful not to touch moving parts and hot surfaces.
- For your own safety and that of others, ensure that all electrical work is done by authorised personnel.
- If the power supply flexible cord becomes damaged, it must be replaced by an authorised service agent or similarly qualified person in order to avoid a hazard.
- If installing or removing the refrigeration cabinet, refer to the Installation Guidelines below, and observe all necessary safety precautions.
- The appliance is not designed to be stable while in motion. Use extreme caution when moving or transporting it.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- If the cabinet is to be scrapped, ensure the cabinet is unplugged from the power supply and cut off the mains flex close to the back of the cabinet. Be mindful of the risk of animals or children becoming trapped in the appliance – either remove or secure the doors.
- Refrigerant must be removed by a qualified service person and the cabinet recycled/disposed of in accordance with local regulations.

This cabinet is designed to operate within a specific climatic class environment. The cabinet rating label inside the cabinet lists the climate class number.

Climate class	Ambient temperature	Relative humidity
3	25°C	60%
4	30°C	55%
5	40°C	40%
7 (tropical)	35°C	75%

The cabinet includes relevant hazard symbols that may be associated with the appliance. Refer to the information below for symbol description.

WARNING



The refrigeration system contains flammable R290 refrigerant. Do not tamper with it. The refrigeration system must only be serviced by qualified personnel.

 
Underbench Display Ranges

BackBar (BB), CounterLine (CL), SlimLine (SL)




Installation Guidelines

Ensure the installation guidelines below are considered and met.

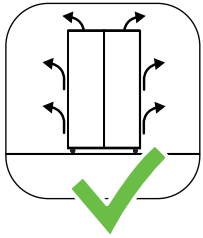


Ventilation

 Ensure all ventilation requirements below are met.

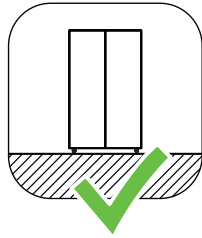


Surface

 The installation surface must be capable of supporting the loaded cabinet.

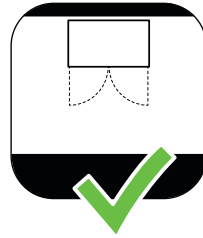

Door Opening

 
Allow adequate space for the door/s to open and close properly.

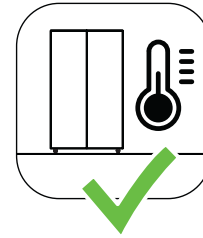

Climate Class


The fridge must be installed in an environment within its climate class.

 The climate class is stated on the cabinet rating label inside the fridge, and explained on the front page of this user guide.

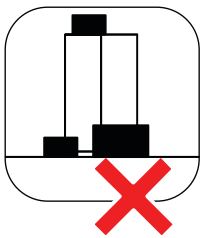


Blocking Ventilation

 Do not store boxes or items in front or on top of the fridge.

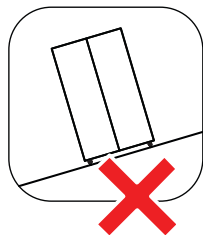


Uneven Surface

 Do not install the fridge on an uneven surface.

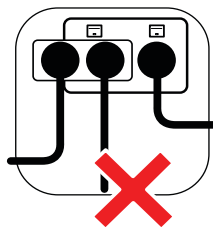


Power Supply

 Do not overload the power supply.

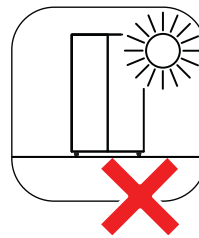

Sunlight

 Do not install the fridge in direct sunlight.

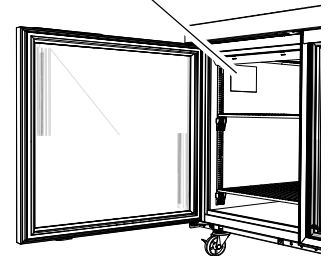

Ventilation Requirements

For efficient operation of the fridge, it is essential that adequate ventilation be provided around the front of the refrigeration cartridge. Normal operating conditions should not exceed the operating temperature range.

It is critical that the hot refrigeration exhaust air is not restricted and that it can easily flow out and away from the front of the cabinet. Never store cardboard cartons or other items in front of the refrigeration cartridge. The ventilation slots on the refrigeration compartment front cover must be kept clear at all times.

Power Cord

Before final positioning of the cabinet, pull the power cord out and connect it to the mains power supply.

Lights

The interior lights switch on and off automatically depending on use.

Use

Do not place any load on the front 120 mm of the cabinet top. Excess weight or pressure in this area may cause the benchtop to bend and obstruct the cabinet doors.

If loading is required in this area, please order the "Custom Benchtop" version of this cabinet.

Underbench Display Ranges

 
BackBar (BB), CounterLine (CL), SlimLine (SL)



Shelves


Each shelf is held in place with four shelf clips, which clip into the shelf support strips inside the cabinet. The shelf clips may be positioned at different heights to suit various product. If required, additional shelves may be purchased from SKOPE.

Use the numbers on the shelf support strips to help set the shelf clips at the same height.

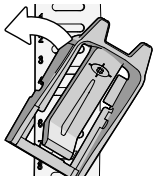


To fit a shelf clip

 Twist the clip onto the shelf support strip anticlockwise.

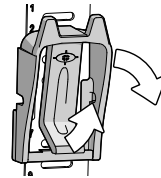

To remove a shelf clip

 Pull the centre tab up and twist the clip off clockwise.

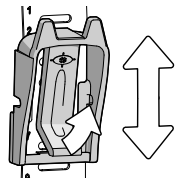


To adjust the shelf clip height

Pull the centre tab up and slide up or down as required. Once in position, ensure the tab clicks into place.


Loading product

 Let the cabinet cool down to the desired storage temperature before loading it with product. When loading the cabinet:

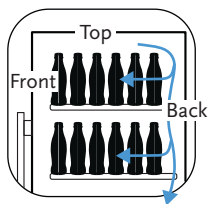

Internal Airflow

 Leave 25 mm space between product and the back of the cabinet interior.

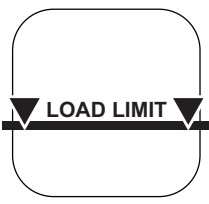


Load Limit

Do not load product above the load limit indicators.



Shelf Loading

 Do not overload the shelves.

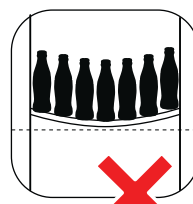

Shelf Flexing

Remove product if the shelf is flexing.



Shelf Overhang

Do not let product hang over the shelves.



Cabinet Floor

Do not load product on the cabinet floor. Use the shelves.

Electronic Controller

The electronic controller regulates the cabinet's internal temperature, signals alarms and captures operational information. The internal temperature is set at the factory for storing perishable product.

To customise the settings to your requirements and view historical data, download the SKOPE-connect app from the Google Play Store or Apple App Store, and connect via Bluetooth.



Apple App store



Google Play store

Routine Cleaning

Ensure the cabinet is disconnected from the mains power supply before cleaning.

 
IMPORTANT: Do **not** use abrasive, corrosive or solvent-based cleaners, as they may damage the cabinet finish.

Wipe the inside and outside of the cabinet, including the door gasket, with warm water and a soft cloth, taking care to keep moisture away from electrical parts.

The condenser coil must be kept clean. SKOPE strongly recommends cleaning the condenser coil and air filter every month.


Do **not** use hard or sharp tools to clean the coil as these may cause damage.

Clean the condenser filter

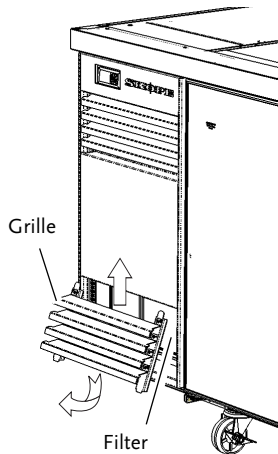

1. Disconnect the cabinet from the mains power supply.
2. The filter is located behind the bottom grille, and is accessed by lifting the grille up and rotating the lower end out towards you. Remove the filter from the cabinet with the same movement.
3. Clean the filter with a vacuum cleaner, wash with cold water and shake off any excess water before refitting. **Do not** apply hot water, blow-dry or place in a dishwasher. If necessary, discard the filter and refit a new one.

 Clean the condenser coil

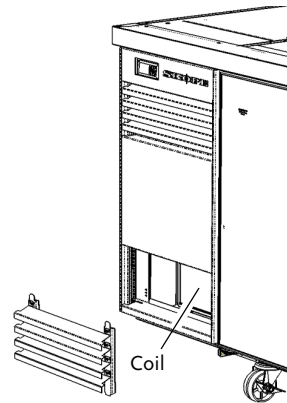

1. Disconnect the cabinet from the mains power supply.
2. Remove the filter.
3. Brush the condenser coil with a soft brush to remove any dust and fluff.
4. Refit the filter and close the bottom grille.
5. Reconnect the cabinet to the mains power supply.

Service and Support

We know you will get years of satisfaction from your new SKOPE product when you follow a few simple preventative maintenance guidelines.

Helpful information is available on the SKOPE website: www.skope.com/after-sales-support

