

## User Guide

Thank you for purchasing a SKOPE refrigeration product.

### Safety

Always observe safety precautions when using any electrical appliance. Read these instructions carefully and keep them for future reference.

#### WARNING

- Ensure the appliance is disconnected from the power supply before performing any cleaning or maintenance.
  - Do not cover the grilles or block the entry or exhaust of airflow by placing objects up against the refrigeration unit.
  - Should manual defrosting be necessary, turn off the refrigeration system and allow the ice to melt by air circulation. Collect ice and water during defrost to prevent a slip hazard. Do not use mechanical methods to remove ice, as this may damage the refrigeration circuit.
  - Do not use any electrical devices or appliances inside the food storage compartment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
  - Do not use this appliance for other than its intended use.
  - Do not insert fingers/foreign objects into any holes.
  - Only use this appliance with the voltage specified on the cabinet rating label.
  - Ensure the appliance has adequate ventilation as this is essential to economical, high performance.
  - Be careful not to touch moving parts and hot surfaces.
  - For your own safety and that of others, ensure that all electrical work is done by authorised personnel.
  - If the power supply flexible cord becomes damaged, it must be replaced by an authorised service agent or similarly qualified person in order to avoid a hazard.
  - If installing or removing the refrigeration cabinet, refer to the Installation Guidelines below, and observe all necessary safety precautions.
  - The appliance is not designed to be stable while in motion. Use extreme caution when moving or transporting it.
  - Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
  - If the cabinet is to be scrapped, ensure the cabinet is unplugged from the power supply and cut off the mains flex close to the back of the cabinet. Be mindful of the risk of animals or children becoming trapped in the appliance – either remove or secure doors if necessary.
  - Refrigerant must be removed by a qualified service person and the cabinet recycled/disposed of in accordance with local regulations.

This cabinet is designed to operate within a specific climatic class environment. The cabinet rating label inside the cabinet lists the climate class number.

Climate class	Ambient temperature	Relative humidity
3	25°C	60%
4	30°C	55%
5	40°C	40%
7 (tropical)	35°C	75%

The cabinet includes relevant hazard symbols that may be associated with the appliance. Refer to the information below for symbol description.

 


#### WARNING

The refrigeration system contains flammable R290 refrigerant. Do not tamper with it. The refrigeration system must only be serviced by qualified personnel.


## Installation Guidelines

When installing this fridge, ensure you consider the installation guidelines below.

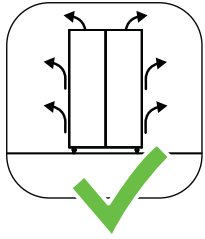


### Ventilation

 Ensure all ventilation requirements below are met.

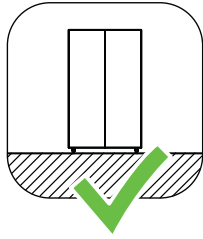


### Surface

 The installation surface must be capable of supporting the loaded cabinet.

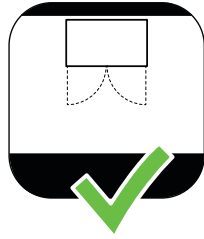


### Door Opening

 Allow adequate space for the door/s to open and close properly.

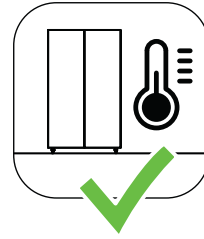


### Climate Class

 The fridge must be installed in an environment within its climate class. The climate class is stated on the cabinet rating label inside the fridge, and explained on the front page of this user guide.

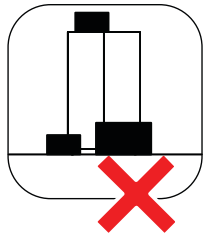


### Blocking Ventilation

 Do not store boxes or items in front or on top of the fridge.

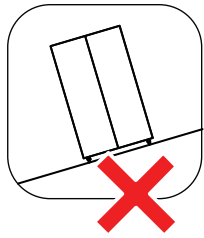


### Uneven Surface

 Do not install the fridge on an uneven surface.

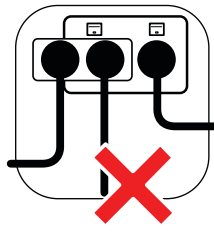


### Power Supply

 Do not overload the power supply.

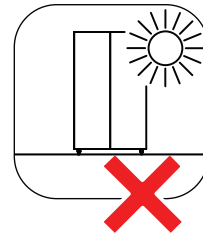


### Sunlight

 Do not install the fridge in direct sunlight.

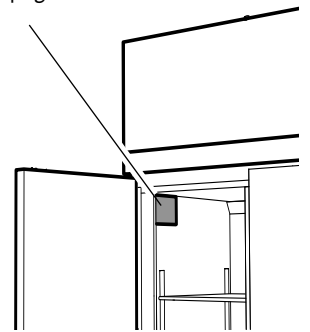

## Ventilation Requirements

 
All cabinets must have the following ventilation clearances at all times.

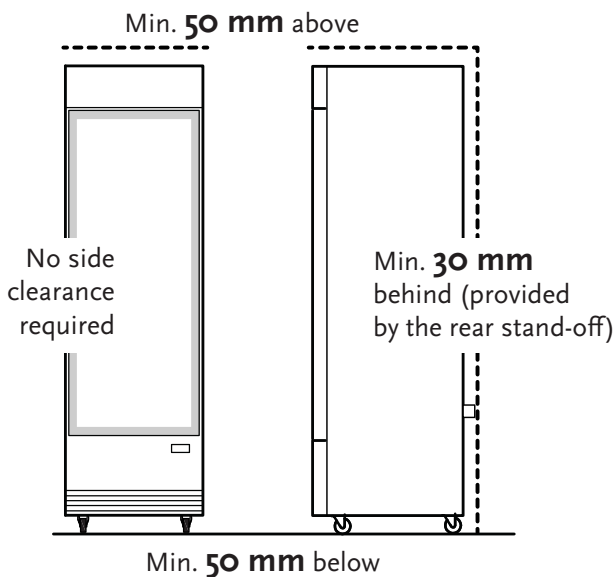


## Door Handles

The door handles may be packed inside the fridge.
 
### To fit the door handle

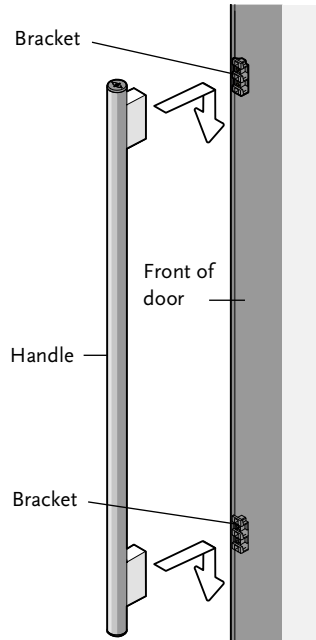

 1. A metal spring is fitted inside the handle mounts. Ensure the springs point up.

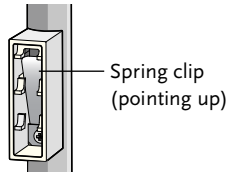


2. Place **BOTH** handle mounts simultaneously onto both door brackets. Then push the handle down onto the brackets until the handle locks in place.

#### Troubleshooting

 - If the handle doesn't lock into place, check that the spring clips are pointing up and try again.
- If only one end of the handle locks into place, remove the door handle and refit with both handle mounts placed onto the brackets.


### To remove the door handle

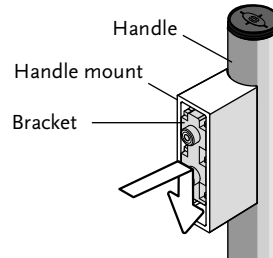

1. Peel back the door gasket from behind the handle mounts on the inside of the door frame.
2. Unscrew the handle mounts through the holes on the inside of the door frame, and remove the handle.

**Important:** Only unscrew the top and bottom screws. Do **NOT** unscrew the middle screw.

 3. Remove the bracket/s from the handle mount by pressing the bracket in and down until it unclips from the handle mount.

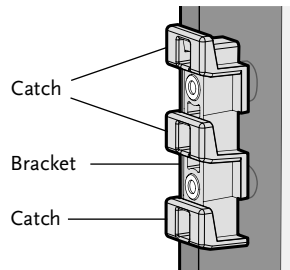


4. Fit and screw the bracket/s back onto the door. Ensure the catches are pointing up as pictured.

5. Clip the gasket back into place on the inside of the door frame. If the gasket is out of shape, use a hair drier to heat and reshape it.

## Shelves

 
The wire shelves sit on shelf clips. The shelf clips twist onto the shelf support strips in the cabinet interior. The shelves may be positioned at different heights to suit various product. Use the numbers on the shelf support strips to help set the shelf clips at the same height.

The fridge is fitted with a solid bottom shelf, which must remain in place at all times.

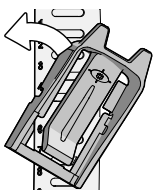


### To fit a shelf clip

 Twist anticlockwise onto the shelf support strip.

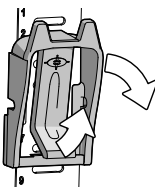

### To remove a shelf clip

 Pull the centre tab up and twist off clockwise.

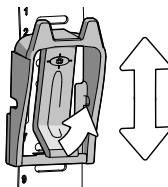

### To adjust the shelf clip height

Pull the centre tab up, and slide up or down as required. Once in position, ensure it clicks into place.

 
## Loading Product

The cabinet is designed for, and tested to, 5 layers of product. If product is to be loaded on wire shelves only, an extra wire shelf may be fitted.

Let the fridge run for 30 minutes before loading it with product for the first time. When loading the shelves with product:



**Maximum Loading**  
Do not overload the shelves.

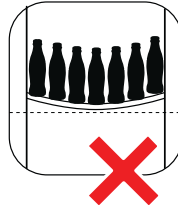

**Shelf Flexing**  
Remove product if the shelf is flexing.



**Shelf Overhang**  
Do not let product hang over the shelves.

## Electronic Controller

The electronic controller regulates the fridge's temperature, signals alarms and captures operational information. The fridge temperature is set at the factory for storing perishable product (all shelves maintain temperatures below 5°C).

To customise the fridge settings to your requirements and view historical data, download the SKOPE-connect app from the Google Play Store or Apple App Store, and connect via Bluetooth.



Apple App store



Google Play store

## Lights

The lights switch on and off automatically depending on cabinet use.

## Cleaning

Ensure the cabinet is unplugged from the power supply before cleaning.

**Important:** Do **not** use abrasive, corrosive, or solvent-based cleaners, as they could damage the protective coating of the cabinet.

Wipe the inside and outside of the cabinet, including the door gasket, with warm water and a soft cloth, taking care to keep moisture away from electrical parts.